

Condensate pump NTH 110

INSTALLATION NOTES

Mount the pump level underneath the dairy cabinet.

Connect the inlet to the dairy pump on top of the lid. Make sure that the connection pipe has no kinks or sharp comers and the condensate enters before the filter.


Connect the mains using the IEC lead supplied. Plug in the 3 pin plug into the pump and wire the other end as follows:-

L (LIVE) N(NEUTRAL) E (EARTH) Brown Blue

Yellow/Green

Connect the discharge tube to the pump taking care not have any sharp comers or kinks.



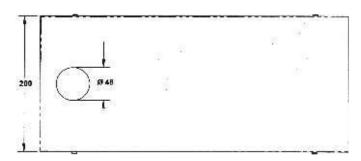

COMMISSIONING & MAINTENANCE Ensure on commissioning that the filter / reservoir is free from all debris as this can cause the pump to fail.

We would advise that the filter, pump and reservoir be inspected every 3-4 months for signs of contamination.

If there are signs of contamination remove all debris from the filter then pump through 15litres of hot soapy water.

TESTING

Fill the tank with clean water until the pump switches on. If the pump fails to operate check the power supply.

The pump should operate till the water level reaches the nossle height. If the pump is not horizontal, it may effect the pump as it may not pump long enough to remove the water.

PUMP SPECIFICATION

INPUT VOLTAGE 230V +/-10%

INPUT POWER 37 Watts

MAXIMUM PUMPING HEAD 30 Meters

MAXIMUM FLOW RATE 110 LIHr

NOISE LEVEL 45-60 dbA

mm RESERVOIR CAPACITY

I-Common

5 Litres

FAILSAFE CONNECTION 2 - Normally Open 3 - Normally Closed

RUN ON TIME 40 Seconds

FAILSAFE TIME 10 Minutes

OVERLOAD TIME 20 Minutes

CONTACT RATING 230VAC

3AAC non inductive load

ENCLOSURE HEIGHT 60mm

WIDTH 200mm LENGTH 460mm

CONSTRUCTION 0.9mm Stainless Steel

INLET CONNECTION 48mm Top entry gravity feed

38mm Side entry feed

OUTLET CONNECTION 15mmID