

User Manual

Pressure • Temperature • Humidity • Air Velocity • Airflow • Sound level

Luxmeter LX 100



Table of content

I - Introduction4
II - General information4
Photometric unities
III - Operating principle6
Keyboard presentation
IV - Configuration7
Screen control
V - During measurement8
Range
VI - Operating information10
Over-range 10 Power 10
VII - Maintenance10
Servicing
VIII - Main specifications11
Range details 11 Specifications 11 Standard reference 11
IX - Delivery and packaging



I - Introduction

LX100 instrument is a portable instrument totally automatic built for the measurement of illuminance. It displays result in Lux or foot candles (footcandle) and provides:

Instantaneous measurement

· Display illuminance for local measurements

With timed measurement:

- Illuminance min/max values display
- Illuminance averaged value calculation

In addition:

- · It includes a pause function to eliminate any unrepresentative and unwanted illuminance or just to memorize on the screen a local result.
- It allows a relative measurement to reference point for the quantification of increase illuminance or decrease illuminance.

Data are saved when the instrument is stopped or in case of battery failure..

Its sensor is composed by a silicium photodiode, which spectral response is the photopic curve according to CIE standard.


LX 100 instrument is mainly an efficient and easy- to-use instrument: with small size, it has a large display with a resolution of 64*128 pixels, and involving a very high technology.

II - General information

Photometric values

Photometric values are values which allows to define the action of electromagnetic radiation on visual function of the eye of an observer.

The average standard eye, adopted by the CIE (International Commission on Illumination), is defined by a function on spectral efficiency which is relative to spectral for daytime vision or photopic.

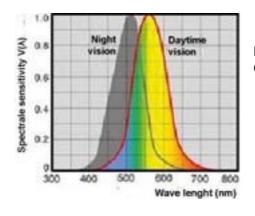


Photopic curve of spectral sensitivity of human eye during diurnal vision

Luxmeter

Photometer destined to measurement of **illuminance**, it is equipped with a photo-electric detector and very often a silicium photodiode coupled with a filter for modify its response to be close-in the most possible of the function of reference $V(\lambda)$ defined in the CIE.



Luminous flux

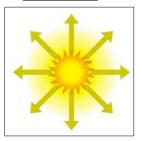

The luminous flux of a source is the assessment, according to the sensitivity of the eye, of the amount of light radiated throughout the area by this source. It is expressed in lumens (Im)..

Luminous intensity



The light intensity is the luminous flux emitted per unit of solid angle in a given direction.. It is measured in candelas, equivalent to **1 Im / sr**.

Luminance



The luminance of a source is the ratio between luminous intensity emitted in one direction and the apparent surface of the luminous source in the considered direction. Luminance is expressed in candelas per square meter (cd/m2).

Illuminance



Illuminance of a surface is the ratio of the luminous flux received at the area of the surface. Its unit is the lux, equivalent to 1 lm/m2. It is also expressed in **footcandle** (fc) according the ratio : 1 fc = 10.76 lux.

LX100 instrument has been built to measure illuminance, it allows a measurement in lux or footcandle for illuminance levels below 10 lux, with 0,1 lux calculation accuracy and with 1% accuracy beyond until 150000 lux.

Use :

For each application, it's advisable to control means of measure to obtain valid and consistent results. Means of use of the instrument has at least so much importance on the result than the quality of the instrument.

It is imperative to take account of the most important parameters including:

- 1. Position correctly the **LX100** cell, according to adequate and representative plan of the current study. (eg: workstation)
- 2. Avoid illumination unrepresentative of the study area
- 3. Deviate significantly from the cell to avoid mitigation area of illumination.

Functions « pause » and « relative level » integrated into **LX100** instrument will allow to avoid these different problems.




III - Operating principle

Keyboard presentation

When being switched on, "measurement screen" is displayed . From this screen, the operator has access to three others screens by pressing $\begin{tabular}{c}$ on keyboard; return to measurement screen is obtained by activating $\begin{tabular}{c}$ $\begin{tabular}{c}$ $\begin{tabular}{c}$ on keyboard; return to measurement screen is obtained by activating $\begin{tabular}{c}$ \begin



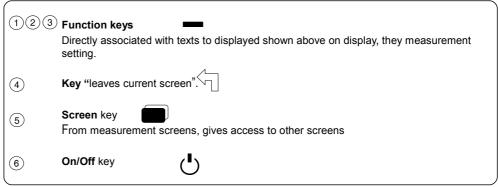

Instrument offers 2 groups of screens

1. Screens representing the 3 different modes of measurement



Instantaneous



Average



Relative

2. Configuration screens



Brightness



Informations



IV - Setting

Accessible from principal measurement screen by successive pushes on key, those different screens allow instrument setting. They also inform users.









Screen control

To optimize display reading, the operator can:

- 1. Adjust brightness by pressing on + and function keys.
- 2. Backlight LCD display for a better reading in a dark place. "**No**" means backlight is switch off and "**Yes**" it is switch on. In this last case, battery life is reduced by about 15%.



-Brightness

About...

Information on origin of manufacture, standard references of the instrument and dates of last and next audits..

By Pressing or English and English keys you can choose language : French or English.



About - English



About - French

A press on **lux** or **fc** keys allows the choice measurement unit : **Lux** or **Footcandle**. *Note* : unit, lux or fc is independent of the used language.



V - During measurement

Range

The digital processing of the instrument avoids for users choice of a range of measurement, **LX100** instrument displays results of measurement in lux or fc on all of its dynamics. To cover the whole field, the screen automatically presents the different formats and units.





Illuminance

From the start, the instrument measures and displays twice a second the instantaneous value of illuminance expressed in Lux or fc. This value gives information to users about illuminance local conditions.

- Min. and max. values completes the screen.
- User can at any time by pressing the keys :
 - Reset in imum and maximum values
 - **▶**■: Enable pause
 - Continue measurement



Averaged illuminance

Measurement principle:

1 x

From the sampled data, the instrument calculates and displays on the measurement duration:

- Instantaneous value at rate of two displays per second
- Average value
- · Max and min values



From the start screen, user accesses to the Moy measurement of illuminance on a period controled by stopwatch, he proceeds as follows:

1 x Launching of the stopwatch, it indicates seconds -minutes-hours-days (max: 03D00H00M00). First values, (average, max and min). During measurement, no other function is accessible.

1 x Stop of measurement, "Reset" is displayed.

In case of poor readability, user can at this moment modify brightness and/or activate backlight.



New measurement

After recording results in his folder, user can launch a new measurement, he proceeds as follows:

1x Reset: a sign RESET? alerts the user of the future reset of memory backup. In case of change of mind, pressing or inhibits the action.

2x Reset Memory is erasing, visualized by the progress bar. Memory is erased, the operator can launch a new measurement.





Stop of the instrument

In case of stop of the instrument, intentionally or accidentally (low battery), results are saved automatically and systematically presented to the user before the launch of a new measure.

Relative illuminance

Principle:


To find the contribution on measurement result by the contribution or removal of a light source, LX100 instrument allows a relative measurement from an existing situation.

For example: knowing the impact of deleting or adding a lighting (neon tubes) in a room.

Proceed as follows:

From the start screen, user accesses to the measurement of the illumination **Rel**


1 x Inst then 1 x Moy : access to the screen. The function is not yet launched.

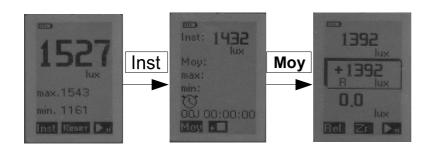

Value displayed at the top of the screen represents instantaneous illuminance

1x Zr : Press Zr key – screen shows:

- **Down**: the instantaneous value of illuminance (598.9 lux here), it will serve as reference. It remains fixed and stored.
- At the top: the value of fluctuating instantaneous illuminance (1268 lux here)
- In the middle: in the panel marked R, it is the difference between instantaneous value displayed at the top and reference value stored down. This value can be positive or negative according to fluctuations of illuminance compared to the moment of memorization of the reference value (\mathbf{Zr} key)

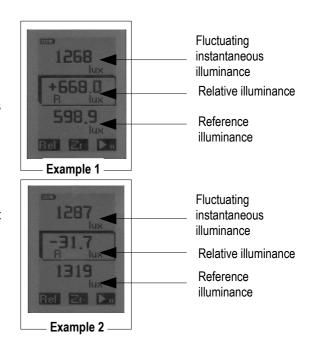



VI - Running informations

Over-range



Under conditions of measuring range excess, defined at 150,000 lux, an over-range pictogram appears. It comes fleetingly for an illuminance exceeding 150 000 lux. Displayed value will be 150.1 klux.

Power source



When the instrument is equipped with alkaline batteries, it can operate for **72 hours minimum**. A symbol informs the user about electric power remaining. If battery is low, less than 1 bar on the pictogram, the instrument stops measuring, saves current measurement and switches off.

VII - Maintenance

Servicing

The LX 100 conception allows a reduced maintenance, which consists in changing batteries and cleaning the instrument and sensor with a slightly dampened cloth. A particular attention must be paid to the white disc covering the silicon photodiode which surface must not have dirts or scratches

Regular checking

Like most measuring instruments, it is strongly recommended to regularly control and calibrate **LX100** instrument. The sensor sensitivity decreases depending on measurement durations and illuminance intensity. Return to the manufacturer each year will provide necessary metrological traceability.

Batteries replacement - adaptors

Batteries

To replace batteries, open the back hatch and insert the 3 new batteries of type 1.5 V / AAA-LR3 inside.

Warning: respect meaning of batteries. If storage is very long, remove batteries.

Adaptor :

If necessary for a long period of measurement, use a USB adaptor .

Note: when using with an external power, it is recommended to remove batteries from LX100. An internal protection, however, allows to secure all if you forget it.



VIII - Main specifications

Range details

lx value	Display	Unit	lux resolution	Minimum accuracy of calculation
0 to 10	0.1 to 10.0	lx	0.1	0.1 lux
10 to 99	10.0 to 99.9	lx	0.1	1%
100 to 999	100.0 to 999.9	lx	0.1	1%
1000 to 999	1000 to 9999	lx	1	1%
10000 to 99999	10.00 to 99.99	klx	10	1%
100000 to 150000	100.0 to 150.0	klx	100	1%
fc value	Display	Unit	fc resolution	Minimum accuracy of calculation
0 to 1	0.00 to 1.00	fc	0.01	0.01 fc
1 to 99	1.00 to 99.99	fc	0.01	1%
100 to 999	100.0 to 999.9	fc	0.1	1%
1000 to 9999	1000 to 9999	fc	1	1%
10000 to 13940	10.00 to 13.94	kfc	10	1%

Specifications

from 0,1 to 150 000 Lux from 0.01 to 13940 fc
as per standard photopic curve
V(λ) NF C 42 -710 class C.
< 10%
< 6%
< 3%
3 days – 03D00H00M
Backlit LCD graphic 128x64.
from 0°C to +50°C
from 0°C to +50°C
120x58x34 mm
185 gr
low drift
for USB power supply adaptor
3 batteries 1.5V type LR3-AAA
72 hours min, continuous operation
according to 89/336/CEE
as per RoHS

Standard reference



IX - Delivery and packaging

- LX100 housing with silicon photodiode sensor and glass filter correction.
- Transport case
- 3 batteries LR3-AAA
- Calibration certificate
- LX100 user manual

www.kimo.fr

